


CP Series Check Valve Maintenance Instructions

Contents




All Kits	Seal Kit	Spring Kit
Maintenance Instructions	O-Ring	Spring Label

WARNING
If the valve is disconnected from a system, it must be depressurized, cycled, and purged.

CAUTION
Care should be taken to not scratch or damage sealing surfaces.

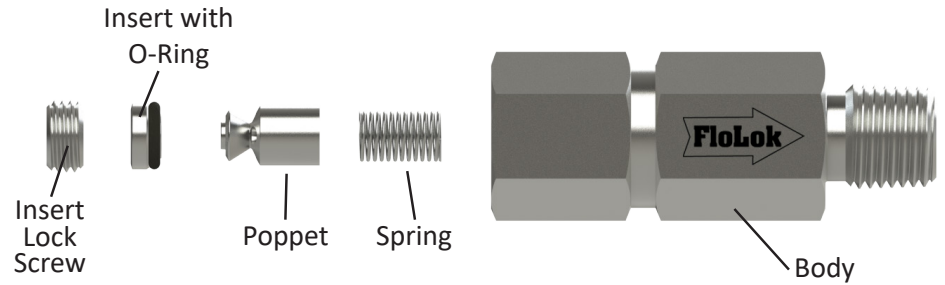


Disassembly

 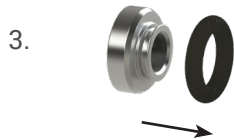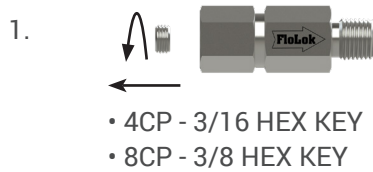

4. Discard components that will be replaced.

 5. Make sure all components are clean.





4. Tighten the insert lock screw according to the table.

Valve Series	Valve Material	Torque Value in lbs (N·m)
4CP	Brass	45 (5.1)
	All Other	85 (9.6)
8CP	Brass	100 (11.3)
	All Other	300 (33.9)

Reassembly

 1. Lubricate the O-Ring and install it on the insert.
(Lubricate with system compatible lubricant)

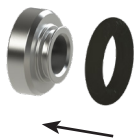

5. Test product prior to installation in the system.

6. Attach the new label to the body hex, as necessary.